

CERAMIC CHEF

The Ceramic Chef is Designed to be two cooking surfaces in one:

- The ribbed side is great for grilling burgers, brats, chicken, and other meats.
- The flat side is perfect for toasting burger or brat buns, grilling vegetables, fish, tortillas and pizzas.
- The even heat from the Ceramic Chef will cook all foods to perfection without burning.
- Easy to use, Place it right on the grill rack or in the oven or broiler
- Continuously hot surface cooks food evenly and quickly
- No food is lost through an open grill rack
- Easy to clean and is dishwasher safe
- Seasons and darkens naturally like cast iron
- The more you use your Ceramic Chef the more it becomes Naturally seasoned and enhances the flavor of foods.
- Frozen foods can be placed directly on a hot Ceramic Chef for thawing and then cooking.
- You can cut with a knife directly on the Ceramic Chef without damaging it.
- Retains heat after removal from grill or oven so can be used as a warming plate
- Cook, cut and sere on the Ceramic Chef
- Designed for use only on the grill or in the oven, not designed for stove-top use.

INSTRUCTIONS FOR USING:

Before using for the first time, rinse with water and air or towel dry.

To Prepare the cooking surface, use a light coat of spray vegetable oil. The Ceramic Chef is ready to be put on the grill rack or in the oven.

With use, the Ceramic Chef will develop a natural dark seasoned patina.

The Ceramic Chef can be placed on a cool or hot grill; temperature should be set from medium high to high heat to evenly cook without fear of burning the food.

Use caution when handling this product after heating it. The Ceramic Chef will become extremely hot when placed directly on a hot grill or in a heated oven. Always use heat resistant gloves or hot pads to protect your hands when handling a warm Ceramic Chef.

NOT DESIGNED FOR STOVE-TOP COOKING.

CARE AND CLEANING:

The Ceramic Chef is virtually water tight and cleans easily.

After grilling on the Ceramic Chef, just use water and a stiff brush to remove any leftover food. This will clean the cooking surface and still maintain the natural seasoning.

The Ceramic Chef is dishwasher safe, but washing it may remove the seasoning.

Because of the natural rough texture of ceramic products, be sure to protect surfaces from being scratched by covering them before placing the Ceramic Chef directly on them.

The Ceramic Chef is made of ceramic material and will crack or break if dropped or if it falls.

Handmade in Roseville, Ohio USA